
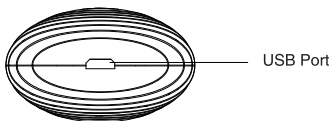


Product Overview

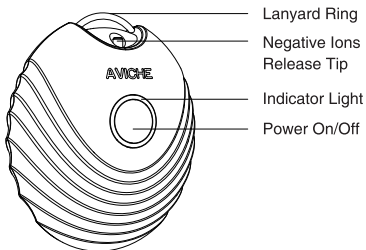

Note: Be cautious of allergy or discomfort to static electricity and negative ions!

Product Introduction

- Wearable Air Purifier is a innovative product designed and produced by AVICHE Shandong Medical Technology Co., Ltd. AVICHE is invested and established by AVIC Avionics Systems. Adhering to the concept of AVIC and making use of its technical strength, AVICHE has composed a strong team of comprehensive innovation, fast productization, and quick response with the expert teams from medical, optical, computer, electronics, machinery, management and other fields. Aiming at “Transform Aviation Technology, Care for Human Health”, AVICHE has adopted widely advanced management concept at home and abroad, striven hard to enhance its core competitiveness, and vigorously promoted the spirit of “transfer, innovation, quality and service”. Forming the “customer first, quality first and employee-oriented” corporate culture. AVICHE has been making constant efforts to strengthen the national brand and contribute to Human medical and health cause.
- Wearable Air Purifier has beautiful appearance and has the functions of purifying air, eliminating dust, anti-oxidation, anti-aging, eliminating germs, preventing infection, regulating nerves, refreshing the mind and relieving fatigue.
- Portable and wearable design, easy to use and wear for all ages people.
- The lanyard of wearable air purifier is processed with special technology, It has better effect if contact skin.

Warning

- Avoid direct sunlight.
- Far away from water and fire.
- Turn off the power when cleaning surface stains.
- Prohibit disassembly by non-professional.
- Avoid hard objects.
- Do not directly touch negative ions release tip by hands.

Function Introduction

How does wearable air purifier work?

Wearable air purifier need no consumables, no filter to replace, One button to operate, easy to use. It can produce negative ions to work and can be rechargeable and reusable.

What is the function of negative ions?

Negative ions are very common in the nature like forest, waterfall, seaside, after thunderstorm, etc. For example, People will feel refresh and comfortable, That is why there are plenty of negative ions.

AVICHE's Wearable Air Purifier is tailored to release negative ions. Negative ions not only can catch up the microscopic dust in air like pm2.5 and bacteria to purify air and kill bacteria and also have good health function to body. Negative ions can go through human body to reduce blood fat, improve blood circulation, enhance immunity and anti-aging ability, improve sleep level. It is called "human body vitamin"!

How do negative ions purify air?

Negative ions can capture the indoor PM2.5 and even smaller microscopic particles and change their physical

properties to make the floating dust with different charges attract and adhere to each other, and finally fall down to the ground. Moreover, negative ions have been identified as an effective means of killing bacteria to purify the air. The mechanism is the negative ions can bind to the bacteria and cause the bacteria to undergo structural changes or energy transfer to die.

How to use

How to power on/off?

Press the power button to power on/off.

How to recharge?

Wearable air purifier uses a standard USB charging interface and equip a common USB charging cable. User can use the 5V/500Ma-1A adapter to achieve recharging (ordinary mobile phone charger can be used).

How does the indicator light work?

The indicator light shows red color when the equipment is in recharging process.

The red color will disappear when the equipment is at full recharge state.

The indicator light shows green color when the equipment is in working process.

◎If the equipment is recharging in turn-on state. The indicator light shows yellowgreen color. After full recharge, The indicator light shows green color.

How long does it take to fully charge?

2~3 hours.

How long can the wearable air purifier work after fully charged?

> 20 hours.



Transform Aviation Technology
Care for Human Health

Manufacturer: AVICHE Shandong Medical Technology Co., Ltd.

Headquarter Address: Floor 26, Building A, A2-1 Jinan Pharm Valley,
Gangxingsan Road, High-tech District, Jinan
City, Shandong Province, China.

Service Hotline: +86-400-800-9850

Fax: +86-531-55683666

Website: www.aviche.com

Wearable Air Purifier Warranty Card

Product Code	W3						
Warranty Period	From	Y/	M/	D to	Y/	M/	D
Purchaser	Name						
	Address						
	Phone						
Sales Unit	Name						
	Address						
	Phone						
After-sales Service Instructions	1. Warranty a. Since the date of purchase, the warranty period will last for 1 year, and free maintenance will be provided (except for force majeure and human factors). b. The affiliated gifts will not be covered within the warranty. c. Proof: Purchase records, shopping certificate, and invoice. 2. Spare Parts Spare parts will be provided free of charge within the warranty period, and is subject to charges out of warranty period. 3. Contact Information for After-sales Service Phone: +86-400-800-9850						

Product Inspection Certificate

Product Name: Wearable Air Purifier

Model No.: W3

Inspection Date: _____

Quality Controller:



AVICHE Shandong Medical Technology Co., Ltd.

AVICHE

Product Specifications


Product Name	Wearable Air Purifier
Product Code	W3
Negative Ions	≥ 20 millions PCS/cm ³ (output)
	≥ 5 millions PCS/cm ³ (5cm)
Recharging Time	2~3 hours
Recharging Current	200mA
Rated Power	<1W
Battery	Lithium ion polymer battery
Battery Capacity	350mAh
Battery Life	Cycle charge>500 times
Weight	39g
Product Dimension	50×30×59mm
Packing List	Main unit×1, Lanyard rope×1, USB recharging rope×1, Product inspection certificatex1, User manual (including warranty card) ×1
Package Dimension	160×130×45mm

AVICHE

Wearable Air Purifier

User Manual

Product Code: W3

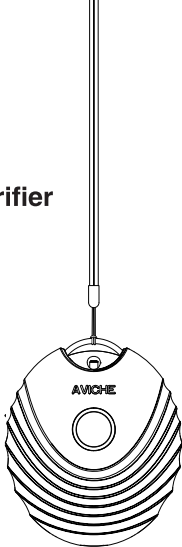

Version 2.1

Thank you for choosing AVICHE's Wearable Air Purifier. Please read this User Manual carefully before use and maintenance and keep it properly for future reference.