


# AVICHE

## **Wearable Air Purifier User Manual**

Product Code: M5  
Version 1.0

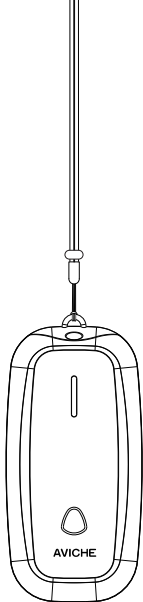

Thank you for choosing AVICHE's Wearable Air Purifier. Please read this User Manual carefully before use and maintenance and keep it properly for future reference.

## Product Introduction

- Wearable Air Purifier is an innovative product designed and produced by AVICHE Shandong Medical Technology Co., Ltd.
- Wearable Air Purifier has beautiful appearance and has the functions of purifying air, eliminating dust, anti-oxidation, anti-aging, eliminating germs, preventing infection, regulating nerves, refreshing the mind and relieving fatigue.
- Wearable air purifier needs no consumables, no filter to replace, One button to operate, easy to use. It can produce negative ions to work and can be rechargeable and reusable. The lanyard of wearable air purifier is processed with special technology, It has better effect if contact skin.
- Negative ions can capture the indoor PM2.5 and even smaller microscopic particles and change their physical properties to make the floating dust with different charges attract and adhere to each other, and finally fall down to the ground. Moreover, negative ions have been identified as an effective means of killing bacteria to purify the air. The mechanism is the negative ions can bind to the bacteria and cause the bacteria to undergo structural changes or energy transfer to die.

## Instructions

### ■ **Instructions for use**

Press the button to switch the machine on and off. The blue indicator light is on when the purifier is running in high gear, the green indicator light is on when it is running low, the red indicator light is on when charging, and the red indicator light is off when it is full.

### ■ **Low power reminder**

When the machine is running, the red indicator light flashes to remind the user that the remaining power is not enough to use for another 1 hours.

### ■ **Charging mode**

The wearable air purifier adopts the standard Type-C charging interface, It can be charged by 5V/500mA-1A adapter (or ordinary mobile phone charger).

### ■ **Charging time and service life**

It takes about 3-3.5 hours for the machine to be fully charged. It can work 60-65 hours at high gear and 160-180 hours at low gear.

## Warning

- Avoid direct sunlight.
- Far away from water and fire.
- Turn off the power when cleaning surface stains.
- Prohibit disassembly by non-professional.
- Avoid hard objects.
- Do not directly touch negative ions release tip by hands.



Transform Aviation Technology  
Care for Human Health

**Manufacturer:** AVICHE Shandong Medical Technology Co., Ltd.


**Headquarter Address:** Floor 26, Building A, A2-1 Jinan Pharm Valley,  
Gangxingsan Road, High-tech District, Jinan  
City, Shandong Province, China.

**Service Hotline:** +86-400-800-9850

**Fax:** +86-531-55683666

**Website:** [www.aviche.cn](http://www.aviche.cn)

## Product Overview

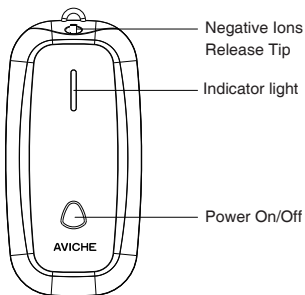

**Note:** Be cautious of allergy or discomfort to static electricity and negative ions!

## Product Specifications

Product Name	Wearable Air Purifier
Product Code	M5
Negative Ions	$\geq 120$ millions PCS/cm <sup>3</sup> (high gear)
	$\geq 100$ millions PCS/cm <sup>3</sup> (low gear)
Recharging Time	3-3.5 hours
Work Time	160-180 hours (low gear)
	60-65 hours (high gear)
Recharging Current	400mA
Rated Power	<0.2W
Indicator light	Red light,Blue light,Green light
Operating Conditions	-10~60°C
	$\leq 70\%RH$
Battery	Lithium ion polymer battery
Battery Capacity	900mAh
Battery Life	Cycle charge > 500 times
Weight	48g
Product Dimension	85×40×23mm
Packing List	Main unit ×1
	USB recharging rope ×1
	Lanyard rope ×1
	User manual (including warranty card)×1
Package Dimension	170x90x55 mm

## Product Inspection Certificate

Product Name: Wearable Air Purifier

Model No.: M5

Inspection Date: \_\_\_\_\_

Quality Controller:



AVICHE Shandong Medical Technology Co., Ltd.

## Wearable Air Purifier Warranty Card

Product Code	M5						
Warranty Period	From	Y/	M/	D to	Y/	M/	D
Purchaser	Name						
	Address						
	Phone						
Sales Unit	Name						
	Address						
	Phone						
After-sales Service Instructions	<p>1. Warranty</p> <p>a. Since the date of purchase, the warranty period will last for 1 year, and free maintenance will be provided (except for force majeure and human factors).</p> <p>b. The affiliated gifts will not be covered within the warranty.</p> <p>c. Proof: Purchase records, shopping certificate, and invoice.</p> <p>2. Spare Parts</p> <p>Spare parts will be provided free of charge with in the warranty period, and is subject to charges out of warranty period.</p> <p>3. Contact Information for After-sales Service</p> <p>Phone: +86-400-800-9850</p>						