


Smart Air Purifier C5

Smart Adjustment, 9-Stages Purification

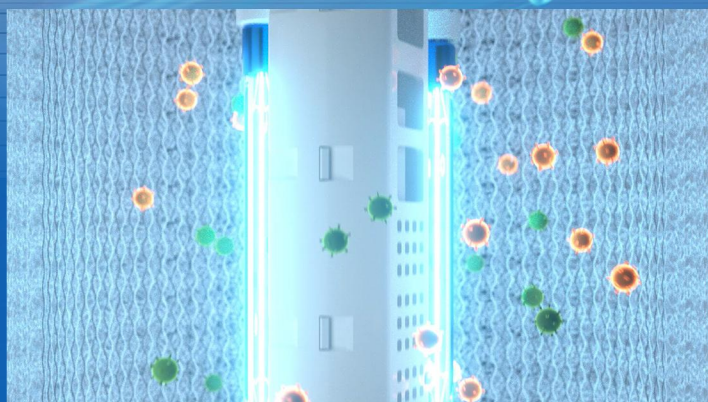

Effectively Against Viruses

C5 uses two UVC lamps, UVC light helps reduce airborne bacteria, viruses(including COVID-19), mold spores, and equipped with antibacterial filter, sterilization rete up to 99.97%


The bactericidal effect has been professionally tested by Guangdong detection center of microbiology

AVICHE

AVICHE Shandong Medical Technology Co., Ltd


Email: info@aviche.com

UVC Sterilization & 9 Stages Purification

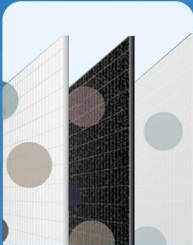

Filter Particles

- Pre-Filter
- Hepa filter
- Activated carbon layer

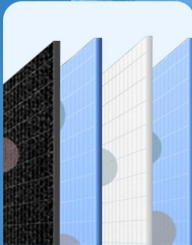

Antibacterial

- Antibacterial filter
- Photocatalyst layer
- Lysozyme layer
- Nano silver sterilization



Sterilize

- UVC sterilization



Purify Air

- Negative Ions




x2

C5 using two UVC lamps, UVC light helps reduce airborne bacteria, viruses, mold spores, sterilization rate up to **99.97%**
And it works with Photocatalyst layer to reduce volatile organic compounds (VOCs).

- The bactericidal effect has been professionally tested by Guangdong detection center of microbiology



Smart Mode

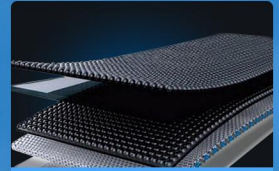


9 Stages Purification



99.9% Sterilization



Application Area: 29-50m²

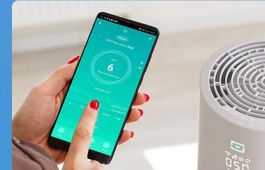

Smart Control via Tuya



Remote Control



Voice Control



Sleep Mode

Smart Air Purification

Free your hands, set it to smart mode, and it will automatically start purifying the air when it detects an elevated level of pollutions (PM2.5>10)



10>PM2.5
Energy Saving Mode



10< PM2.5
Automatic Purification



115< PM2.5
Strong Purification

Smart Life Starts From Here

Remote control your air purifier from home or on the go via **Tuya APP**.
Enjoy advanced features and multiplayer device sharing

- Remote control
- PM2.5 real-time display
- Air quality curve
- Filter service life reminder
- Smart scene
- Family sharing



Powered by



Model:	C5
CADR (PM2.5):	420 m³/h
CADR (HCHO):	100 m³/h
Application area:	50-80 m²
Noise:	32dB-63dB
Smart control:	Tuya smart App
Sterilization rate:	99.97%
Negative ions:	5 million pcs/m³
Net weight:	6 kg
Size :	275MM(DIA)x542 MM(H)
UVC lamp:	2 Replacement UVC lamp
Wattage:	50W
Input power:	100V-240V ~50Hz/60Hz

Purifications:

Pre-filter / HEPA filter
Antibacterial layer
Activated carbon layer
Photocatalyst layer
Lysozyme layer sterilization
Nano silver sterilization
UVC sterilization
Negative ions purification